




SWITCH GEAR FIBERGLASS BOX PAD FOR SERIES 9, 10 & 11 SWITCHES

UGS




APPROVED BY: *Jage Semeane*

PREPARED BY: JRS

APPROVED DATE:

BY: WFM

CHECKED

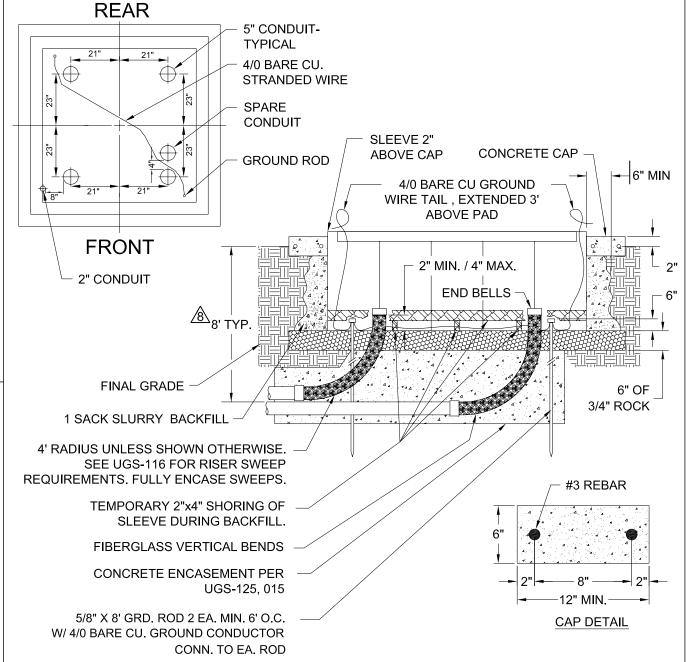

Notes:

- 1. See UGS-011 for box pad requirements.
- 2. Termination compartments of the switchgear are not to be installed to the front or rear of the box pad.
- 3. Where required, spare conduits will be installed as shown above.
- 4. Barrier posts are required per UGS-290.
- 5. Refer to UGS-225 for ground rod installation.
- 6. Conduit sweeps shall be encased with concrete per UGS-125 and UGS-015 mix #4003.
- 7. Contractor shall provide temporary 2"x4" shoring during backfill. Backfill shall be a 1 sack slurry mix.

Issued: 11/08

8. Vertical bends shall be fiberglass.